
STEERING DAMPER MOUNTING KIT for


Ducati Hypermotard 1100 (S) Model 2006>

| MK-DU11-T001 PART LIST | | | |
|--------------------------|---|----------------------|---|
| SD stroke 75 | 1 | M8x40 | 2 |
| Damper clamp Type 3 | 1 | Washer M6 Ø 12 | 3 |
| O-Ring | 2 | Washer M8 Ø 16 | 1 |
| Fork bracket (MP-FOMK71) | 1 | Spacer (MP-SP081308) | 2 |
| Tank bracket (MP-TAMK60) | 1 | - | - |
| M6 D9 L10 inverse bolt | 2 | - | - |
| M6x25 Low head | 1 | - | - |
| M8x25 Button head | 1 | - | - |

ALL IDEAS, DESIGNS ARRANGEMENTS AND PLANS INDICATED OR REPRESTENTED BY THIS DRAWING ARE OWNED BY HYPERPRO ALL IDEAS, DESIGNS ARRANGEMENTS AND PURISH FOR USE ON ARPICES OF MEDIAN THIS DRAWING ARE OWNED BY HITERPROV.

AND WERE CREATED, EVOLVED AND DEVELOPED FOR USE ON ARPICES OF MEDIAN SHOULD NOT THE SPECIFIC PROJECT. NONE SUCH IDEAS, DESIGNS, ARRANGEMENTS OR PLANS SHALL BE USED BY OR DISCLOSED TO ANY PERSON, FIRM OR CORPORATION FOR ANY PURPOSE WHATSOEVER WITHOUT THE WRITTEN PERMISSION OF HYPERPRO.

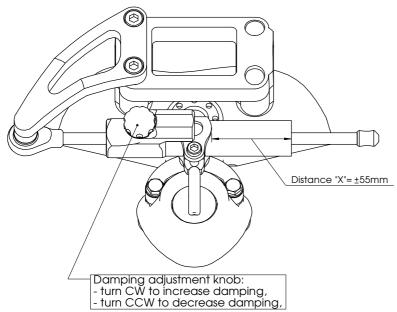

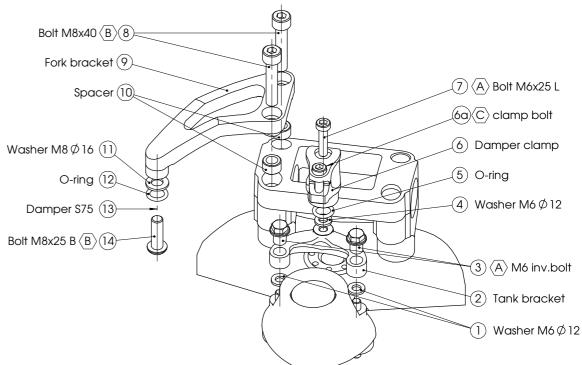

A: 5-9Nm / 44-80Lbs.ln / 4.0-6.4Lbs.Ft B: 14-17Nm / 124-150Lbs.ln / 10.3-12.5Lbs.Ft

D: 8Nm / 70Lbs.ln / 5.9Lbs.Ft E: 55Nm / 486Lbs.ln / 40Lbs.Ft F: Factory torque (see owners manual)

C: 6Nm / 53Lbs.ln / 4.4Lbs.Ft



STEERING DAMPER MOUNTING KIT for

Ducati Hypermotard 1100 (\$) Model 2006>

MK-DU11-T001 INSTALLATION INSTRUCTIONS

In general:

HYPERPRO can not be held responsible in any way for any form of physical, material, financial or other damage arising from use, assembly or overhaul of HYPERPRO products. HYPERPRO reserves the right to make changes without prior notice.

This product is ONLY YO BE INSTALLED BY A PROFESSIONAL MECHANIC.

This product is only to be used for the motorcycle brand, model and year stated specificly on top of the pages of this manual.

DO NOT attempt to install this product on motorcycles from any different brand, model and/or year than stated on the pages of this manual.

DO NOT use this kit for cars, boats, jet-skies, snowmobiles, ATV's, aircraft, hovercrafts or any other vehicel and/or purpose.

HYPERPRO steering dampers are FOR RACE USE ONLY, NOT FOR HIGHWAY USE!

Before installation:

- Please read the entire manual carefully before starting the installation!
- Check if you have all the tools required. Good tools are a must.
- Protect your bike at the most important places in and around the work area (e.g. tank, fairing, frame, etc.), with a blanket, towel or similar.

During installation:

- Check all operations and parts carefully before, during and after performing each step.
- Clean all surfaces that are required for fitting parts together or for applying self adhesives or loctite, thoroughly with contactcleaner or another degreaser, unless otherwise stated.
- Be carefull not to damage or scratch any part of your bike.
- ALWAYS work relaxed and concentrated!! It is very easy to damage something or make a mistake.

After installation:

- Check and make sure that there is no contact between any part of the steering damper kit and any part of the motorcycle. The kit should not hit anything. Steering movement should not be limited by the steering damper. If the steering movement is limited, adjust the position of the tube in the clamp untill steering movent is normal again. Do not forget to tighten the clamp bolt again!
- ALWAYS check the steering movement and feeling before each ride!
- FIRST RIDES: Start with the damper turned fully open (turn adjuster knob fully counter clockwise).
 Start adjusting in between rides with steps of MAX. 2 CLICKS (0.25 TURN) EACH TIME, untill the damper is working satisfactory for your riding style.
- damper is working satisfactory for your riding style.

 NEVER USE MAXIMUM SETTING, ALWAYS OPEN AT LEAST 2 CLICKS (0.25 TURN).
- WARNING! DAMPER HAS AN ACTIVE / SPEEDSENSITIVE DAMPING SYSTEM:
- Steering with NORMAL MOVEMENT should be FREE!!
- Steering with FAST MOVEMENT should be CONTROLLED BY DAMPER!
- HYPERPRO uses a special seal to reduce friction. The seal uses an oil film to work properly.
 It is normal that some oil can appear on the pistonrod.
- Damper works with oil: DAMPING CAN BE HARDER AT LOWER TEMPERATURES!

Step 1: installing the tank bracket

Install the tank bracket using:

- 2x Washer M6 Ø 12 (1)
- Tank bracket (2)
- 2x M6 inverse bolt (3)

Remove the 2 original M6 nuts from the front ignition key mounting points. Place the supplied M6 washers (1) over the threads and install the tank bracket (2) using the M6 inverse bolts (3). Tighten the bolts (3) with a torque of approx. 5-9Nm/44-80Lbs.ln/4.0-6.4Lbs.Ft.

Step 2: installing the damper clamp

Install the damper clamp using:

- Washer M6 Ø 12 (4)
- 1x O-Ring (5)
- Damper clamp Type 3 (6)
- Bolt M6x25 Low head (7)

Put the assembly together as shown on page 1: use the M6x25 bolt (7) to install the clamp (6), O-ring (5) and washer (4) to the tank bracket (2). Tighten the bolt with a torque of approx. 5-9Nm/44-80Lbs.ln/4.0-6.4Lbs.Ft.

Step 3: installing the fork bracket

Install the fork bracket pre-assembly using:

- 2x M8x40 bolt (8)
- Fork bracket (9)
- 2x spacer (10)

Loosen and remove the 2 left-hand bolts from the handlebar clamp. Place the spacers (10) in the holes, fit the fork bracket (9) and the supplied M8x40 bolts (8) and tighten them with a torque of approx. 14-17Nm/124-150Lbs.ln/10.3-12.5Lbs.Ft.

Step 4: installing the steering damper

Install the steering damper using:

- Steering damper, stroke 75 (13)
- Washer M8 Ø 16 (11)
- 1x O-ring (12)
- Bolt M8x25 button head (14)

Ensure that the clamp bolt of the damper clamp is pointing to the rear. Shove the damper (13), with the knob-end first, through the clamp untill the ball-joint can be fitted to the fork bracket. Use the washer (11), O-ring (12) and M8 bolt (14) to fit the ball-joint to the tank bracket and tighten to a torque of approx. 14-17Nm/124-150Lbs.ln/10.3-12.5Lbs.Ft.

Position the damper tube untill the distance "X" stated on page 1 is reached, then tighten the M6 clamp bolt (6a) with a torque of approx. 6Nm/53Lbs.ln/4.4Lbs.Ft. Check if the damper is level horizontally and aligned to the bike. Check if the damper does not touch anything (e.g. tank) when steering from left to right. Check if the bike can make it's full steering angle from left to right.