

MOUNTING PROCEDURE

KIT PORTATARGA YAMAHA MT-09 2017

YMT9104-17

WWW.BARRACUDAMOTO.COM

KIT

- X2. SPECIFIC BRACKET
- X1. UNDERTAIL
- X4. SPACER H.6 MM.
- X1. SPACER H.30 THREADED
- X6. NUT Ø 6
- X4. AUTOLOCK NUT Ø 5
- X6. WASHER Ø 6 LARGE
- X4. WASHER Ø 5 LARGE
- X6. SCREW 6X14 "ROUND HEAD"
- X4. SCREW 5X25 "ROUND HEAD"
- X2. SCREW 5X10
- X1. CHAINTENDER KIT (X2 PZ.)

MOUNTING PROCEDURE LICENCE PLATE:

- UN-FIX THE ORIGINAL LICENCE PLATE AND THE UNDERTAIL. FIX THE LICENCE PLATE BRACKET PUTTING THE SPACER H30 IN THE CENTER OF THE TWO BRACKET LOCKING WITH 2 SCREWS 5X10 .


- APPROACH THE LICENCE PLATE UNDER THE TAIL FIXING IT WITH 5X25 SCREWS AND H.6 MM SPACER IN CONTRAST.

- UNLOCK THE SIDE COVER ALREADY UNLOCK AND INSERT THE BARRACUDA UNDERTAIL INTO THEM.

- FIX THE UNDERTAIL TO THE SIDE COVER WITH THE 6X14 SCREWS AND LOCK THEM WITH Ø6 NUT.

- REPEAT THE OPERATION FOR ALL THE FIXING POINTS OF UNDERTAIL


- APPLY THE "X" TO THE LICENCE PLATE JUNCTION OF SPECIFIC BRACKET.

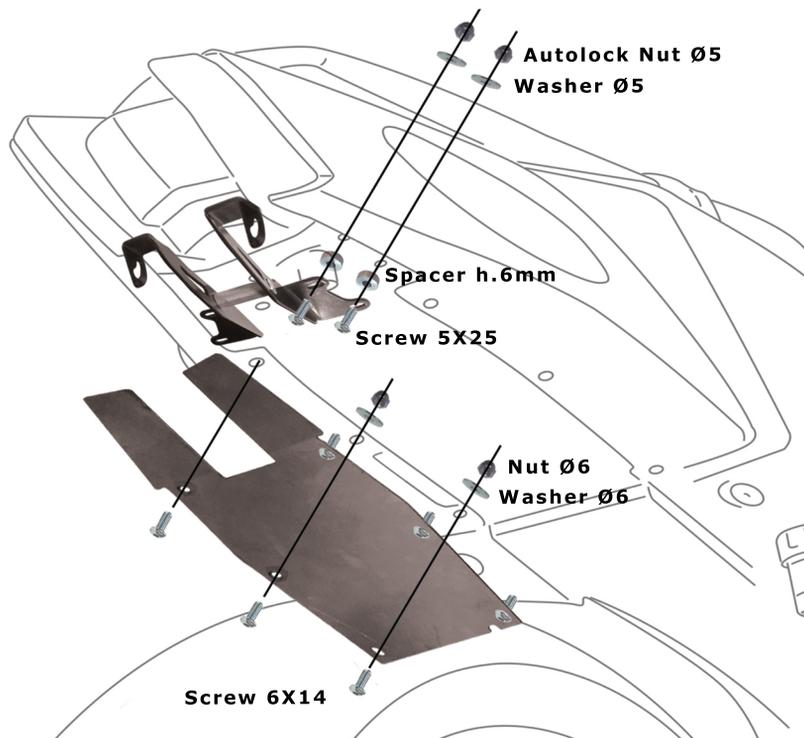

CHAINTENDER MOUNTING PROCEDURE:

UNSCREW THE ORIGINAL NUT AND WASHER FROM THE WHEEL PIN AND INSERT THE CHAINTENDERS "A" AND "B" AS PICTURE.

LOCK THE ORIGINAL NUT AT THE END AND THE WASHER AS MANUAL.

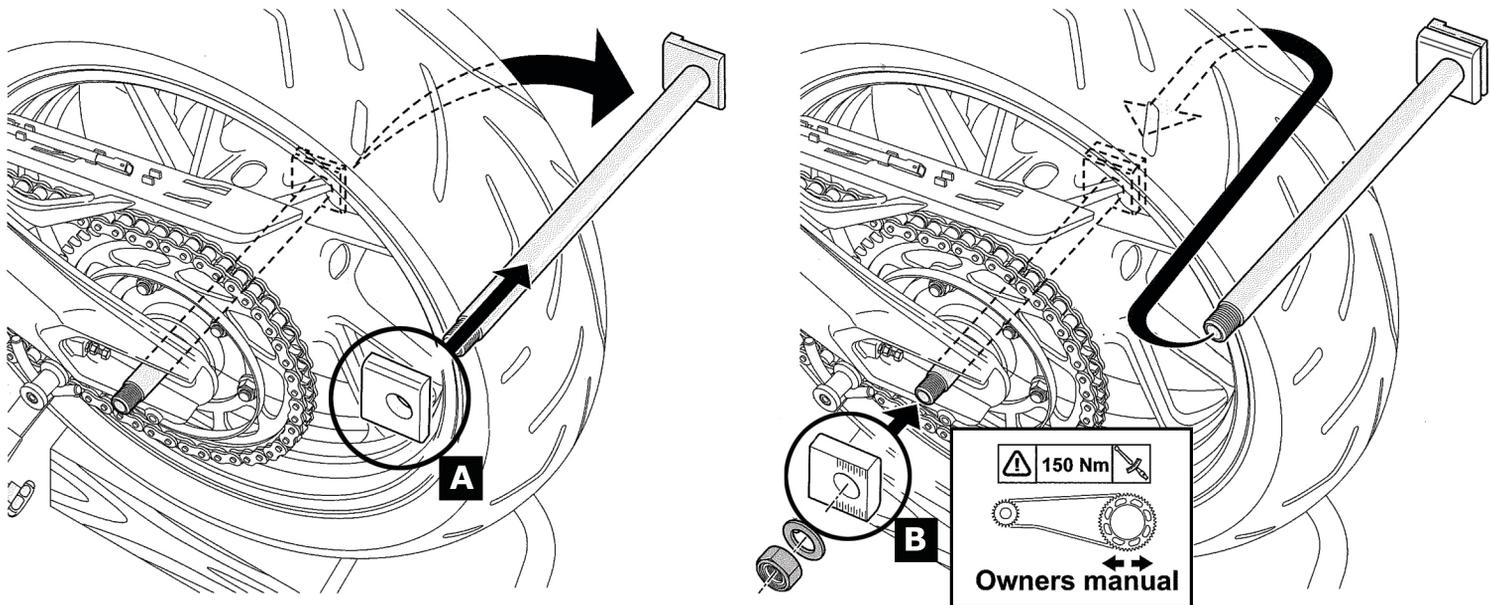

NOTE: WE ADVISE TO TAKE AN INCLINATION NOT EXCEEDING 30° TO AVOID STRUCTURAL POSSIBLE BROKEN